

# RAYMOND WEIL

GENEVE

## INSTRUCTIONS FOR USE



QUARTZ WATCH  
WITH DATE

## INTRODUCTION



Congratulations on your choice of a watch from the RAYMOND WEIL collection, a dynamic expression of masterful design and the constant objective of Swiss-made quality that have been the hallmarks of the brand since its creation.

Your RAYMOND WEIL watch was hand-assembled by our watchmakers according to the most rigorous quality standards of the Swiss watch industry.

In order to guarantee that your RAYMOND WEIL watch will function perfectly for many years to come, please pay close attention to the advice contained in these instructions for use as well as in the international guarantee.

Your watch features a high-precision quartz movement powered by a long-lasting battery.

## US FEDERAL SAFETY REQUIREMENTS FOR BUTTON CELL OR COIN BATTERIES

1. Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
2. Even used batteries may cause severe injury or death. Call a local poison control center for treatment information.
3. Non-rechargeable batteries are not to be recharged.
4. Do not force discharge, recharge, disassemble, heat above 65°C/149°F or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.

The battery should only be replaced by an authorized professional.

### **WARNING**

- **INGESTION HAZARD:** This product contains button cells/coin batteries: Battery type (BT321/BT364/BT371/BT395); Nominal voltage of 1.55V.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell/coin battery can cause **Internal Chemical Burns** in as little as 2 hours.
- **KEEP** new and used batteries **OUT REACH of CHILDREN.**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.




## BATTERY TYPE AND CHARACTERISTICS PER WATCH MODEL

WATCH MODEL	BATTERY	VOLTAGE (V)	CAPACITY (mAh)	TYPE
1250	BT364	1,55	19	Silver-oxide
1500	BT317	1,55	11	Silver-oxide
1600	BT364	1,55	19	Silver-oxide
1700	BT364	1,55	19	Silver-oxide
4476	BT395	1,55	55	Silver-oxide
5024	BT321	1,55	14.5	Silver-oxide
5124	BT379	1,55	16	Silver-oxide
5127	BT364	1,55	19	Silver-oxide
5132	BT364	1,55	19	Silver-oxide
5136	BT371	1,55	35	Silver-oxide
5180	BT364	1,55	19	Silver-oxide
5229	BT364	1,55	19	Silver-oxide
5235	BT371	1,55	35	Silver-oxide
5245	BT371	1,55	35	Silver-oxide
5250	BT321	1,55	14.5	Silver-oxide
5280	BT321	1,55	14,5	Silver-oxide
5385	BT371	1,55	35	Silver-oxide
5388	BT371	1,55	35	Silver-oxide
5391	BT364	1,55	19	Silver-oxide
5399	BT364	1,55	19	Silver-oxide
5425	BT371	1,55	35	Silver-oxide
5466	BT371	1,55	35	Silver-oxide
5484	BT373	1,55	29	Silver-oxide

WATCH MODEL	BATTERY	VOLTAGE (V)	CAPACITY (mAh)	TYPE
5485	BT371	1,55	35	Silver-oxide
5488	BT371	1,55	35	Silver-oxide
5580	BT371	1,55	35	Silver-oxide
5585	BT371	1,55	35	Silver-oxide
5588	BT371	1,55	35	Silver-oxide
5591	BT371	1,55	35	Silver-oxide
5626	BT364	1,55	19	Silver-oxide
5629	BT364	1,55	19	Silver-oxide
5634	BT371	1,55	35	Silver-oxide
5925	BT364	1,55	19	Silver-oxide
5932	BT364	1,55	19	Silver-oxide
5960	BT371	1,55	35	Silver-oxide
5985	BT364	1,55	19	Silver-oxide
5988	BT364	1,55	19	Silver-oxide
8160	BT371	1,55	35	Silver-oxide
8260	BT371	1,55	35	Silver-oxide
8280	BT371	1,55	35	Silver-oxide
8560	BT395	1,55	55	Silver-oxide
8570	BT395	1,55	55	Silver-oxide

# QUARTZ WATCH

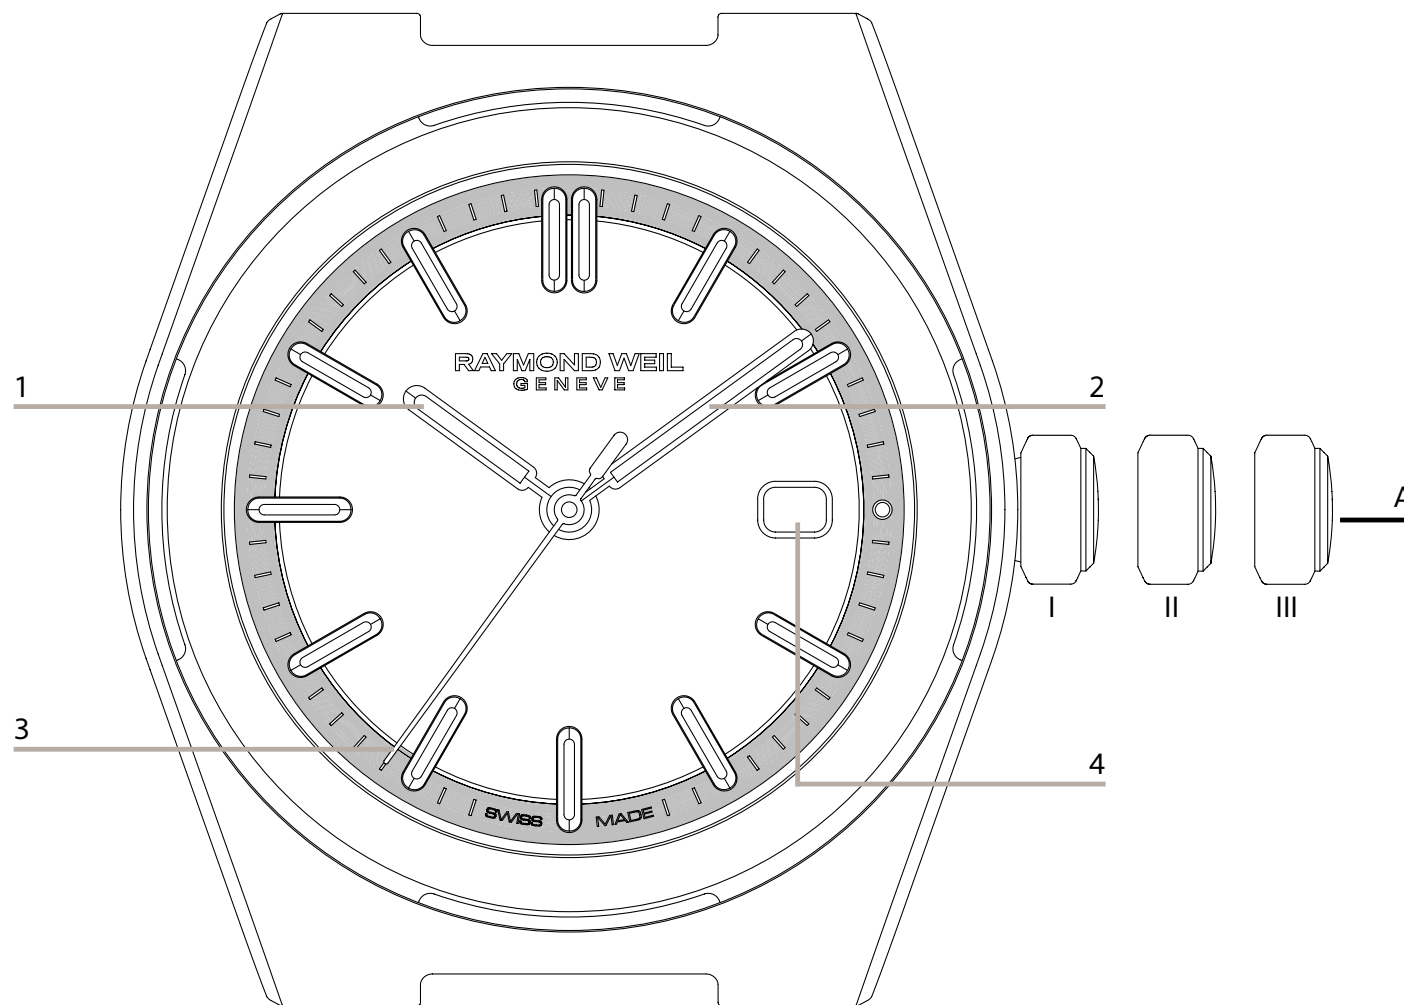


- 1. Hour hand
- 2. Minute hand
- 3. Second hand
- 4. Date indicator

## A. Crown

- I. Normal
- II. Pulled out, date-setting position
- III. Pulled out, time-setting position

THE CROWN HAS THREE DIFFERENT POSITIONS.

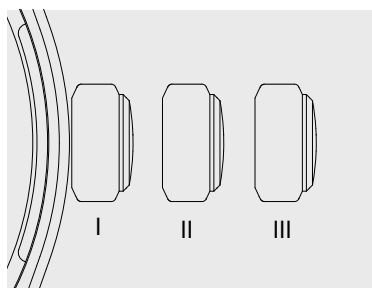

I. Normal

II. Pulled out, date-setting position

III. Pulled out, time-setting position

### **I - NORMAL POSITION**

The crown is pressed against the case in its normal position, ensuring the water-resistance of the watch.

### **II - DATE SETTING POSITION**

The crown is pulled out one notch.

This position allows the date to be adjusted by turning the crown anti-clockwise.

After adjustment, return the crown to position I, against the case to ensure the water resistance of the watch.

### **III - TIME SETTING POSITION**

The crown is pulled out two notches.

This position allows the time to be set by turning the crown in either direction.

After adjustment, return the crown to position I, against the case to ensure the water resistance of the watch.

## WATCH CARE

WE INVITE YOU TO FOLLOW THE RECOMMENDATIONS BELOW TO ENSURE THE PERFECT PERFORMANCE AND CARE OF YOUR WATCH

### **CROWN**

Always push the crown back into the case (position I) to prevent water from entering the mechanism. Do not operate the crown under water.

### **MAGNETIC FIELDS**

Avoid contact with magnets, or putting your watch on top of loudspeakers, refrigerators or magnetic cases for iPads or other tablets. These devices generate powerful magnetic fields that can affect the accuracy of your watch.

### **WATER RESISTANCE**

Respect the water resistance limit and always rinse your watch with fresh water after swimming.

### **SHOCKS**

Whether physical, thermal or other, avoid them.

### **CLEANING**

For metal bracelets, rubber straps and water-resistant cases, use a toothbrush and soapy water for cleaning and dry with a soft cloth.

### **LEATHER STRAP**

Avoid contact with water, dampness, greasy substances and cosmetic products to prevent discolouration and deformation. Avoid prolonged exposure to sunlight to prevent the colour from fading.

### **CHEMICAL PRODUCTS**

Avoid direct contact with solvents, detergents, perfumes, cosmetics, insect repellents, etc., since they may damage the bracelet, case or gaskets.

### **TEMPERATURE**

Avoid exposure to extreme temperatures (greater than 60°C, or 140°F, less than 0°C, or 32°F) or extreme temperature changes.

### **SERVICING REQUIREMENTS**

To ensure reliable performance your watch should be serviced at least every three years.

## WARRANTY

The watch RAYMOND WEIL is warranted for two years from the date of purchase. This limited warranty is valid provided that your RAYMOND WEIL watch was sold by an authorised RAYMOND WEIL dealer and that the warranty card (Limited Warranty Card/Guarantee Card) was fully and properly fulfilled by the latter.

This limited warranty covers the defects in material or resulting from manufacturing of the watch.

Are excluded from this limited warranty of the manufacturer:

- Battery, crystal, strap;
- Damage resulting from an accident, normal wear, negligence, misuse, abuse or from the intervention of any person not authorised by RAYMOND WEIL S.A. or its representatives;
- Loss and theft;

Incidental or consequential damage arising from the failure or malfunction of the watch as well as from any inappropriate usage, lack of precision, malfunction or lack of conformity of the watch.

In case of defects covered by this limited warranty, your watch will be, at the sole option of RAYMOND WEIL S.A., repaired or replaced free of charge. This is the sole obligation of RAYMOND WEIL S.A. resulting from this limited warranty and any implied warranties. The dealer is sole responsible for any other warranties it may have granted.

The warranty becomes void in the event that any person not duly authorised by RAYMOND WEIL S.A. or its representatives attempts to repair the claimed defect.

Should you require work under this warranty, please send your watch by insured mail and in a carefully wrapped package to one of the approved after-sales-service centres, or that you take it directly to an approved RAYMOND WEIL dealer. The watch must be accompanied by the duly completed warranty card and purchase receipt.


RAYMOND WEIL offers an extra year's guarantee to its watch owners when they register with the RW Club. The RW Club 3<sup>rd</sup> year guarantee extension is for a duration of one year in addition to and in the continuity of the RAYMOND WEIL standard two year International guarantee policy and is applicable to all watches bought from May 1<sup>st</sup> 2013.

**UNDER NO CIRCUMSTANCES WILL RAYMOND WEIL S.A. BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, SPECIAL OR OTHER DAMAGES.**

**THE DURATION OF ANY WARRANTIES IMPLIED BY LAW (INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY) ARE LIMITED TO THE TWO-YEARS DURATION OF THIS WARRANTY.**

The above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

## NOTICE

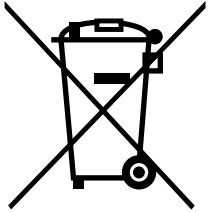

Disposal of a watch by noncompliant methods may cause harm to the environment and is heavily fined according to the regulations established by each one of the EU member countries in application of the Directive on Waste Electrical and Electronic Equipment (Directive 2002/96/EC WEEE). Should you need to dispose of an old watch, please set it aside for separate waste collection or give it to a retailer when purchasing a new watch. RAYMOND WEIL and its approved dealers are at your disposal to provide you with additional information on the subject.

## EXTENDED WARRANTY

RAYMOND WEIL offers an extra year's guarantee to its watch owners when they register with the WEIL Club. Learn more about the WEIL Club [here](#)

Follow the steps below to register your watch with the WEIL Club and receive your extended 3-Year Warranty certificate.

- Create an account
- Register your watch
- Download your Weil Club certificate

